




空調冷氣機 / 熱交換器 / 氣冷式冷卻機系列-散熱器簡易除垢保養

Simple Maintenance for CA / AO/AW Series

| 適用機型 Model | 流程 Process | 步驟 Step | 圖示 Picture | 使用工具 / 物料 Tools/ materials | 注意事項 Note |
|--|--|---|---|--------------------------------|--|
| CA 氣冷式 (風扇散 熱式) 冷卻機 系列 AO/AW Series | 清潔 散 熱 器 (It has to clean condenser.) | 1. 拆下外部護罩板金、拔開顯示基板排線及取下濾網 Removing outer shield plate, unplug cables of display PC board and taking down air filter. |    | 十字起子 Phillips screwdriver | 1. 作業時需戴棉質手套 2. 將濾網向上輕推，再往下取下 1. Please wear cotton gloves when you are working. 2. Please push air filter upward and remove it downward. |
| | | 2. 空氣清潔 Cleaning by air. |   | 空氣風槍 Air spray gun | 1. 清潔時需戴棉質手套，避免割傷 2. 不可將空氣風槍直接戳散熱器表面 3. 清潔方向從上到下（順鰭片方向） 1. Please wear cotton gloves when cleaning to avoid cut. 2. Don't let air spray gun poke directly on surface of condenser. 3. Please clean from top to bottom. (Follow direction of fins) |
| | | 3. 刷除表層汙垢 Brushing out dirt from surface. |   | 軟性刷毛用品 Soft brushing supply | 1. 清潔時需戴棉質手套，避免割傷 2. 由上往下順方向刷除汙垢，切勿過度在鋁質鰭片用力刷除，以免鋁質鰭片變形 1. Please wear cotton gloves when cleaning to avoid cut. 2. Please brush off dirt from top to bottom in a smooth direction, and do not brush too hard on the aluminum fins to avoid deformation of the aluminum fins. |
| | | 4. 空氣再度清潔 Cleaning by air again. |  | 空氣風槍 Air spray gun | 1. 清潔時需戴棉質手套，避免割傷 2. 不可將空氣風槍直接戳散熱器表面 3. 清潔方向從上到下（順鰭片方向） 1. Please wear cotton gloves when cleaning to avoid cut. 2. Don't let air spray gun poke directly on surface of condenser. |

| | | | | | |
|--|--|---|---|-----------|---|
| | | |  | | 3. Please clean from top to bottom. (Follow direction of fins) |
| | | 4. 插上排線、裝上外部護罩板金及裝上濾網 Plugging in cables, and install external shield plate gold and install air filter. |    | 無 None | 1. 裝上前需先戴棉質手套，避免割傷 2. 將濾網向上輕推，再往下放置 1. Please wear cotton gloves before installation to avoid cut. 2. Please push air filter upward and place it downward. |